

Get started:

Minimum requirements: PC, 1GHz, 1Go ram, 5Mo free disk space.

OS: Windows XP or higher, 32 bits or 64 bits, Microsoft .NET Framework 4 required.

Installation may need "Administrator rights".

Do not connect the programming tool to an USB port before driver installation completed.

1. Install the USB drivers

CP210x_VCP_Windows.zip

Unzip the file.

Run "CP210xVCPInstaller_x86.exe" (for 32bits systems) or "CP210xVCPInstaller_x64.exe" (for 64bits systems).

2. Install the programming software:

Run "BEI Programmable Encoder Series.exe", follow the instructions.

3. Click on the desktop icon**4. Connect the programming tool to an USB port****5. Connect the encoder to the programming tool****6. Start programming encoder parameters**