High Voltage DC Contactor

SGX150 150A CERAMIC CONTACTOR



SPECIFICATIONS

Contact data

Specifications	Data
Contact Arrangement	1 Form A
Contact Resistance	≤0.5mΩ @ 200A
Rated Load Current	150A(@50mm ² wire)
Rated Switching Voltage	750Vdc
Rated Switching Power	112.5kW
Min. Applicable Load	6Vdc, 1A
Max. Switching Voltage	750Vdc
Max. Switching Power	112.5kW(750Vdc)
Max. Breaking Current	1500A(750Vdc),1cycle

Feature

• Hermetically seal rated to 175°C – Reduced risk of fire or meltdown in over current conditions.

Sensata

Technologies

- Backfilled with gas (primarily hydrogen) to effectively inhibit oxidation, resulting in low and stable contact resistance.
- The insulation resistance stands at 1000M Ω (1000Vdc), while the dielectric strength between the coil and contacts reaches 4.0kV.
- Continuous current carry 150A at 85°C,
- Comply with IEC 60664-1 and RoHS standards.

Applications

- Material Handling
- Residential ESS
- DC Fast Charging

Characteristics

Specifications		Data	
Dielectric Strength	Between Open contacts	3000Vac, 1min	
	Between Coil&Contacts	4000Vac, 1min	
Insulation Resistance		1000MΩ at 1000Vdc	
Operate Time (at nomi. volt.)		≤30ms	
Release Time (at nomi. volt.)		≤10ms	
Vibration Resistance (sine)		10Hz~500Hz, 49m/s ²	
Shock Resistance		Functional Open: 196m/s ²	
		Functional Close: 490m/s ²	
		Destructive: 490m/s ²	
Ambient Temperature		-40°C~85°C	
Humidity		5% RH~85% RH	
Termination		M6 female screw	
Mounting		M5 screw	
Unit Weight		Approx.270g	
Outline Dimensions		76.5mm X 39mm X 70mm	

Page 1





Coil

Nominal Voltage Vdc	Pick-up Voltage Vdc	Drop-out Voltage Vdc	Coil Power W	
12	≤9	≥1	~6.0 @23°C	
24	≤18	≥2	~0.0 @23 0	

 $2 \times M6 - 6H$

49.8

76.5

Notes: The values above are conservative values within the temperature range (-40°C to $85^\circ\text{C}\text{)}.$

DIMENSIONS

70 63.50±0.5


 $2 \times 7.5 \pm 0$.


Endurance

Specifications		Data	
Electrical Endurance	Capacitive load	Switch on: 2 x 10 ⁴ cycles (37.5Vdc,C=1100uF, inrush 400A. steady 150A)	
	Resistive load	Switch: 500cycles (750Vdc, 150A)	
		Switch:1000cycles (450Vdc, 150A)	
Current Endurance		150A, cont.	
		180A, 2h	
		225A,15min	
		320A, 2min	
		400A, 1min	
		600A, 20s	
		900A, 8s	
Mechanical Endurance		2 x10 ⁵ cycles, on-off ratio: 0.5s : 0.5s	


Notes:

Until special statement, the temperature of electrical endurance is at 23°C and the on-off ratio is 0.6s: 5.4s.
Coil is not connected to surge suppressor during tests. Attention: If the coil is used in parallel with the diode, the release time of the contactor will be prolonged and the service life will be reduced.

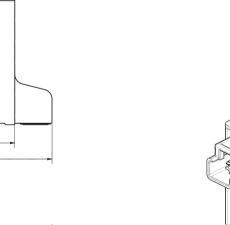

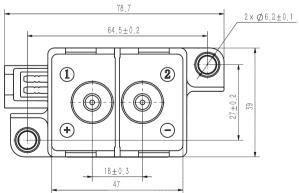

 \square

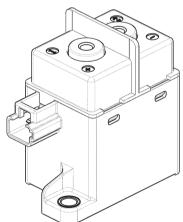

General Tolerance		
Outline Dimension Tolerance		
≤10mm	+0.3mm	
10mm~50mm	+0.6mm	
>50mmm	+1.0mm	


Page 2








① Wiring Diagram

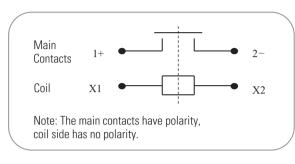

② Recommended connector

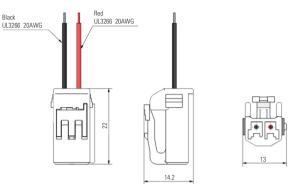



YAZAKI: 7283-1020

③ Installation Torque


Load Terminal Installation				
Installation Mode	Screw Installation Depth	Torque	Copper Busbar Diameter	Copper Busbar Thickness
M6 Screw	7.0mm~8.5mm	6N·m~8N·m	6.0mm~6.5mm	2.0mm~3.0mm

Contactor Installation	
Installation Mode	Torque
M5 Screw	3N·m~4N·m

Note:

In order to prevent loosening, please use extra washer when installing relay: spring washer + flat washer.
Please avoid grease and other foreign matter in the terminal, please use the connecting wire with a cross section area ≥50mm², otherwise they may cause abnormal heating in the terminal part.

3. When installing the contactor at the load using an electric screwdriver, it is recommended to use a three stage step speed mode: the first stage 35rpm, the second stage (100-150) rpm, and the third stage 35rpm.

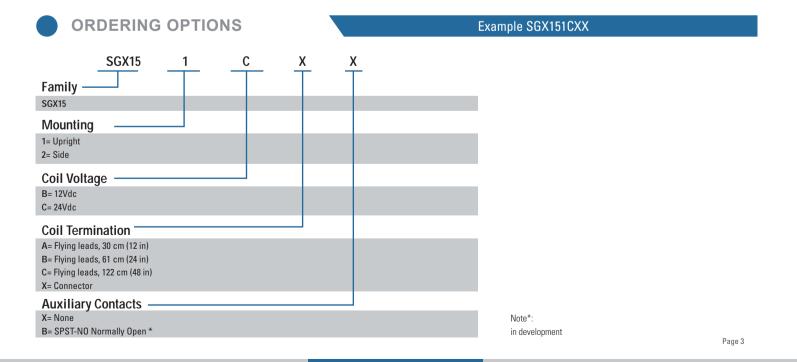





WARNINGS

RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE



• The product's side panels may be hot, allow the product to cool before touching

- Follow proper mounting instructions including torque values
- Do not allow liquids or foreign objects to enter this product

Failure to follow these instructions can result in serious injury, or equipment damage.



HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power before installing or working with this equipment
- Verify all connections and replace all covers before turning on power

Failure to follow these instructions will result in death or serious injury.

Sensata Technologies, Inc. ("Sensata") datasheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, valuation, and judgment in designing Buyer's systems and products. Sensata datasheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular datasheet. Sensata may make corrections, enhancements, improvements, and other changes to its datasheets or components without notice.

Buyers are authorized to use Sensata datasheets with the Sensata component(s) identified in each particular datasheet.HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATASHEETS ARE PROVIDED *AS IS*. SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATASHEETS OR USE OF THE DATASHEETS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET

ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATASHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com. SENSATA ASSUMES NO

LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY, AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA

Copyright © 2024 Sensata Technologies, Inc.

CONTACT US

Americas Sensata GIGAVAC Contactor Center of Excellence 6382 Rose Lane Carpinteria, CA 93013 USA

Tel: +1(805) 684 8401 Email: gigavac@sensata.com Sensata Global Headquarters Sensata Technologies 529 Pleasant Street Attleboro, MA 02703 USA

Europe, Middle East & Africa

Sensata Technologies Holland B.V. Jan Tinbergenstraat 80 7559 SP Hengelo The Netherlands Tel:+31743578000 Email: gigavac-info-eu@list.sensata.com

Asia Pacific China

Sensata Technologies China Co.,Ltd. BM Intercontinental Business Center 30th Floor 100 Yu Tong Road Shanghai 200070 People's Republic of China Tel: +8621 2306 1500 Email:contactorasia@list.sensata.com Japan Sensata Technologies Japan Ltd. Shin Yokohama Square Bldg.7F 2-3-12 Shin-yokohama Kohoku-ku, Yokohama-shi, Kanagawa 222-0033 Tel: +81 45 277 7001 Email:contactorasia@list.sensata.com